



Service Bulletin #249

SB-249
(011212)
ERN 7461


Volkswagen MKV and MKVI Rear Shock Installation

Parts List

Item	Quantity	Part Numbers	Description
A	2	10786	MKV/VI Slam Shock
B	2	13972	VW MKV/VI Rear Shock Spacer
C	2	18500	Nyloc Nut M10 X 1.25" G5 CZ

Procedure

1. Place spacer on shock rod followed by the OEM upper mount.
2. Install nyloc nut to the shock rod and torque to 15 ft.-lbs.

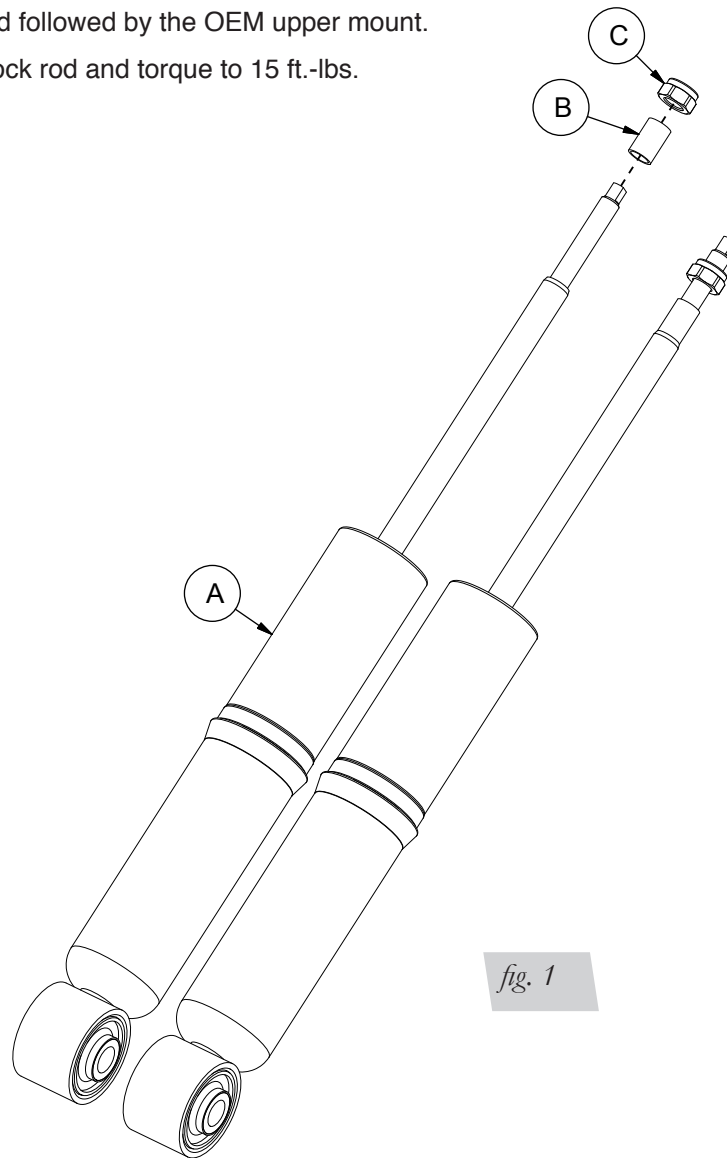

Thank you for purchasing Air Lift Products! For Technical Support, please call (800) 248-0892.
Air Lift Company • P.O. Box 80167, MI 48908-0167 • (517)322-2144 • Fax:(517) 322-0240 • www.airliftcompany.com