

Rear Kit No. 75606 2001-2002 Honda Civic

INSTALLATION GUIDE

For maximum effectiveness and safety, please read these instructions completely before proceeding with installation.

Failure to read these instructions can result in an incorrect installation.

TABLE OF CONTENTS

Introduction	2
Important Safety Notice	. 2
Notation Explanation	. 2
Installation Diagram	
Hardware List	
Tools List	. 3
Installing the EasyStreet Kit	4
Preparing the Vehicle	. 4
Removing the Shock	. 4
Assembling the Shock	. 4
Installing the Upper Mount to the Shock	. 5
Installing the Shock	. 5
Before Operating	. 5
Installation Checklist	6
Maintenance and Servicing	6
Maintaining and Operating	
Warranty and Return Policy	7
Replacement Information	8
Contact Information	8



Introduction

The purpose of this publication is to assist with the installation, maintenance and troubleshooting of the EasyStreet kit.

It is important to read and understand the entire installation guide before beginning installation or performing any maintenance, service or repair. The information here includes a hardware list, tool list, step-by-step installation information, maintenance tips, safety information and a troubleshooting guide.

Air Lift Company reserves the right to make changes and improvements to its products and publications at any time. Contact Air Lift Company at (800) 248-0892 for the latest version of this manual.

IMPORTANT SAFETY NOTICE

The installation of this kit does not alter the Gross Vehicle Weight Rating (GVWR) or payload of the vehicle. Check your vehicle's owner's manual and do not exceed the maximum load listed for your vehicle.

Gross Vehicle Weight Rating: The maximum allowable weight of the fully loaded vehicle (including passengers and cargo). This number — along with other weight limits, as well as tire, rim size and inflation pressure data — is shown on the vehicle's Safety Compliance Certification Label.

Payload: The combined, maximum allowable weight of cargo and passengers that the truck is designed to carry. Payload is GVWR minus the Base Curb Weight.

NOTATION EXPLANATION

Hazard notations appear in various locations in this publication. Information which is highlighted by one of these notations must be observed to help minimize risk of personal injury or possible improper installation which may render the vehicle unsafe. Notes are used to help emphasize areas of procedural importance and provide helpful suggestions. The following definitions explain the use of these notations as they appear throughout this guide.



INDICATES IMMEDIATE HAZARDS WHICH WILL RESULT IN SEVERE PERSONAL INJURY OR DEATH.



INDICATES HAZARDS OR UNSAFE PRACTICES WHICH COULD RESULT IN SEVERE PERSONAL INJURY OR DEATH.




INDICATES HAZARDS OR UNSAFE PRACTICES WHICH COULD RESULT IN DAMAGE TO THE MACHINE OR MINOR PERSONAL INJURY.

NOTE

Indicates a procedure, practice or hint which is important to highlight.



Installation Diagram

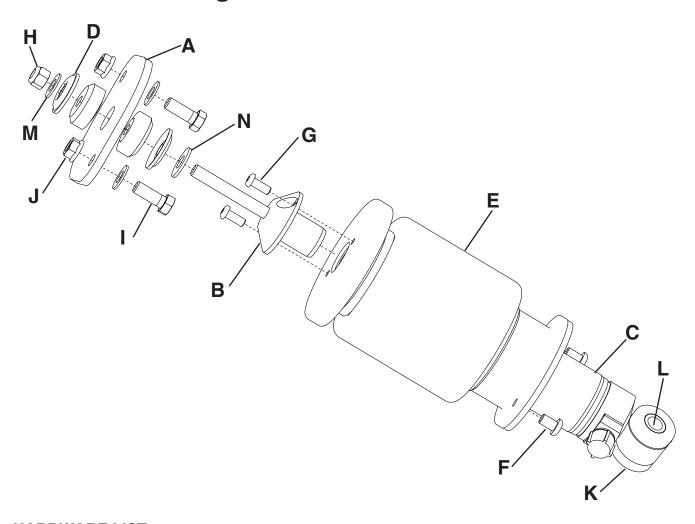

HARDWARE LIST

Item	Part #	Description Qty
Α	10779	Upper mount 2
В	67073	2.63" Stud end mount 2
С	10356	Shock2
D	10607	Bushing kit 1
E	58015	Sleeve assembly2
F	17313	5/16-24 Cap screw 4
G	17312	1/4-24 Cap screw 4
Н	18476	3/8" Nyloc nut 2
1	17107	3/8" Hex bolt 4
J	18422	3/8" Flange nut 4
K	10324	Upper bushing 4
L	10673	Bushing sleeve2
М	18444	3/8" Flat washer 6
N	18407	3/8" Flat washer 2

TOOLS LIST

Description	Qty
Jack	1
Jack Stands or hoist	2
1/2" Drive ratchet	1
3/8" Drive ratchet	1
17mm Socket	1
19mm Socket	1
9/16mm Socket	1
14mm Socket	1
1/2" Socket	1
9/16" Wrench	1
3/16" Allen wrench	1

fig. 1

STOP!

Missing or damaged parts? Call Air Lift customer service at (800) 248-0892 for a replacement part.

MN-571 3




Installing the EasyStreet Kit

PREPARING THE VEHICLE


- 1. Elevate the vehicle and support the body with a hoist or jack stands.
- 2. Remove the rear wheels.

STRUT REMOVAL

1. In the trunk compartment on one side of the vehicle, remove the two upper mounting nuts from the rear strut assembly and discard (fig. 2).

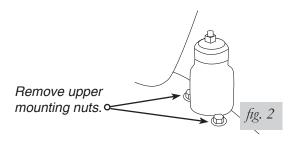


- 2. Remove the lower mounting bolt from the strut assembly and retain for later use (fig. 3).
- 3. Remove the strut from the vehicle and discard (fig. 4).
- 4. Repeat steps 1-3 on the other side of the vehicle.

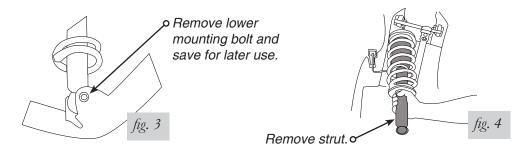

ASSEMBLING THE SHOCK

- 1. Remove and discard the thread protector sleeve.
- 2. Screw two 5/16" cap screws (F) into the lower end of the sleeve assembly (fig. 5).
- 3. Screw two ¼" cap screws (G) into the upper end of the sleeve assembly (fig. 5).
- 4. Press the bushing (K) and bushing sleeve (L) into the lower shock mount (fig. 5).

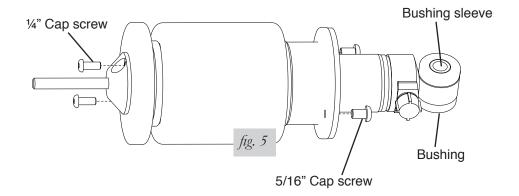




- 5. Check to see that all screws and fasteners are tight.
- 6. Install fitting to the top end cap on the sleeve assembly. Hand tighten plus 1½ wrench turns.


INSTALLING THE UPPER MOUNT TO THE SHOCK

- 1. Place one large 3/8" washer (N) onto the stud mount (B) followed by one bushing kit washer and one bushing (fig. 6).
- 2. Slide the upper mount onto the stud shaft. Slide one bushing onto the shaft followed by one bushing kit washer and one small 3/8" washer (M) and a nyloc nut (H) (fig. 6).
- 3. Tighten the nyloc nut until the upper mount is securely fastened to the shock assembly.

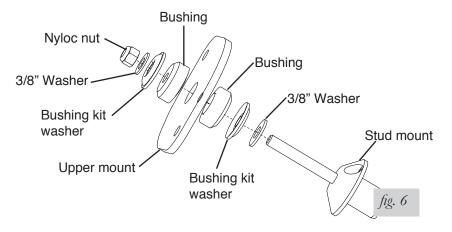

INSTALLING THE SHOCK

- 1. Slide the upper mount into the vehicle mount and fasten with two 3/8" hex bolts (I) as shown, with a washer between each head and each mount. Thread a flange nut (J) onto each bolt and tighten until the upper mount is snug (not tight) (fig. 7).
- 2. Slide the lower shock mount onto the OEM mounting location and fasten with the original bolt (fig. 8).
- 3. Tighten the lower mount bolt securely and then tighten all fasteners attached to the upper mount.

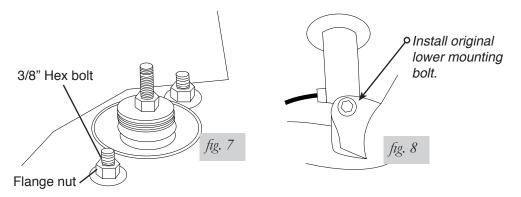

BEFORE OPERATING

- 1. Tighten and visually inspect all hardware.
- 2. Air Lift part #27741 is highly recommended for this product.

MN-571 5



Before Operating

INSTALLATION CHECK	KLIST
--------------------	--------------

Nata
Technician's Signature
☐ Is a copy of the installation instructions in the vehicle for the customer?
☐ Have all hoses been routed correctly and with clearance away from heat sources?
☐ Has the system been checked for leaks?
☐ Is there clearance around the air sleeve?
☐ Have all bolts been tightened?

Maintenance and Servicing

M	linimum Air Pressure	Maximum Air Pressure		
	10 p.s.i.	150 p.s.i.		
	FAILURE TO MAINTAIN CORRECT MINIMUM PRESSURE (OR PRESSURE			
PROP	• •	G OUT, OVER-EXTENSION, OR RUBBING		

- 1. Always maintain ride height. Increase or decrease pressure from the system as necessary to attain ride height for optimal ride and handling. Never inflate beyond 150 p.s.i.
- 2. Driving at low p.s.i can cause the strut to bottom out. Repeated bottoming out can cause the strut to fail. This failure is not covered under warranty.



FOR YOUR SAFETY AND TO PREVENT DAMAGE TO YOUR VEHICLE, DO NOT EXCEED MAXIMUM GROSS VEHICLE WEIGHT RATING (GVWR), AS INDICATED BY THE VEHICLE MANUFACTURER. CHECK YOUR VEHICLE'S OWNERS MANUAL AND DO NOT EXCEED THE MAXIMUM LOAD LISTED FOR YOUR VEHICLE.

3. Should it become necessary to raise the vehicle by the frame or do any service work, make sure the system is at minimum pressure (10 p.s.i.) for safety and to reduce the tension on the suspension and brake components.



Warranty and Returns Policy

Air Lift Company warrants its products for the time periods listed below, to the original retail purchaser against manufacturing defects used on catalog listed applications on cars, vans, light trucks and motorhomes under normal operating conditions for as long as Air Lift manufactures the product. The warranty does not apply to products that have been improperly applied, installed, used in racing applications or not maintained in accordance with installation instructions furnished with all Air Lift products. The consumer will be responsible for removing (labor charges) the defective product from the vehicle and returning it, transportation costs prepaid to the dealer from which it was purchased or to Air Lift Company for verification.

Air Lift will repair or replace, at its option, defective products or components. A minimum \$10.00 shipping and handling charge will apply to all warranty claims. Before returning any defective product, you must call Air Lift (800) 248-0892 U.S. and Canada for a Returned Materials Authorization (RMA) number. Returns to Air Lift can be sent to: Air Lift Company • 2727 Snow Road • Lansing, MI • 48917.

Product failures resulting from abnormal use or misuse are excluded from this warranty. The loss of use of the product, loss of time, inconvenience, commercial loss or consequential damages is not covered. The consumer is responsible for installation/reinstallation (labor charges) of the product. Air Lift Company reserves the right to change the design of any product without assuming any obligation to modify any product previously manufactured.

This warranty gives you specific legal rights and you may also have other rights that may vary from state to state. Some states do not allow limitations on how long an implied warranty lasts or allow the exclusion or limitation of incidental or consequential damages. The above limitation or exclusion may not apply to you. There are no warranties, expressed or implied including any implied warranties of merchantability and fitness, which extend beyond this warranty period. There are no warranties that extend beyond the description on the face hereof. Seller disclaims the implied warranty of merchantability. (Dated proof of purchase required.)

Air Lift 1000*2 Year Limited	RideControl Plus*2 Year Limited
SureSet*2 Year Limited	Load Controller (I)*2 Year Limited
Super Duty*2 Year Limited	SmartAir*2 Year Limited
Other Accessories 2 Year Limited	Load Controller (II)*2 Year Limited
RideControl*2 Year Limited	EasyStreet Systems 1 Year Limited
SlamAir2 Year Limited	RoadTamer Systems 2 Year Limited

*The purchase of an Air Lift Load Controller II, SmartAir Automatic Leveling System or SureSet Load Controller System with a SuperDuty, RideControl, or Air Lift 1000 extends the air springs' warranty from two years to a limited lifetime warranty to the original purchaser of the covered systems. All other above listed warranty requirements will apply. (RoadTamer and EasyStreet air spring systems are excluded from this offer.)

MN-571 7



Replacement Information

If you need replacement parts, contact the local dealer or call Air Lift customer service at (800) 248-0892. Most parts are immediately available and can be shipped the same day.

Contact Air Lift Company customer service at (800) 248-0892 first if:

- Parts are missing from the kit.
- · Need technical assistance on installation or operation.
- Broken or defective parts in the kit.
- · Wrong parts in the kit.
- · Have a warranty claim or question.

Contact the retailer where the kit was purchased:

- If it is necessary to return or exchange the kit for any reason.
- · If there is a problem with shipping if shipped from the retailer.
- If there is a problem with the price.

Contact Information

If you have any questions, comments or need technical assistance contact our customer service department by calling (800) 248-0892, Monday through Friday, 8 a.m. to 5 p.m. Eastern Time. For calls from outside the USA or Canada, our local number is (517) 322-2144.

For inquiries by mail, our address is PO Box 80167, Lansing, MI 48908-0167. Our shipping address for returns is 2727 Snow Road, Lansing, MI 48917.

You may also contact us anytime by e-mail at sales@airliftcompany.com or on the web at www.airliftcompany.com.

Need Help?

Contact our customer service department by calling (800) 248-0892, Monday through Friday, 8 a.m. to 5 p.m. Eastern Time. For calls from outside the USA or Canada, our local number is (517) 322-2144.

Register your warranty online at www.airliftcompany.com/warrantyreg.htm

